


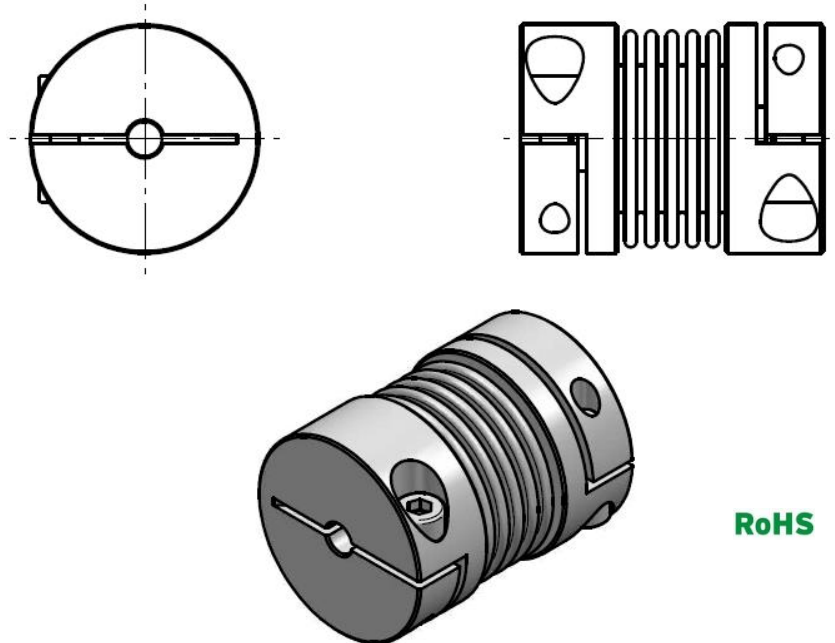


Coupling Series KB2



General Information

The installation and operation instructions are an essential factor of the KBK metal bellows couplings. It indicates tips for proper assembly, operation and maintenance. Please read these instructions carefully and follow the directions. Non-observance may result in failure of the KBK metal bellows coupling.

Safety Instructions

 <p>ATTENTION!</p>	<ul style="list-style-type: none">- Installation may be performed by trained and specialized staff only.- Rotating couplings are hazard areas. The user/operator has to ensure appropriate protective measures. Do not reach into the operation area of the coupling if it is still in operation. Secure the machine against unintentional power-up during assembly work.
--	--

Manufacturer's Declaration

In accordance with directive 2006/42/EC annex IIB, shaft couplings are no machines as per the machinery directive, but components for installations in machines. Operation is not permitted, unless the directives according to the machinery directives are complied with upon integration in the final product.



Miniature-metal bellows coupling with clamping hub: KB2



Function

KBK miniature metal bellows couplings are flexible shaft couplings. The metal bellow compensates lateral, axial and angular misalignment with low restoring forces.

Shaft-hub connections

KBK metal bellows couplings may only be used in accordance with the technical data stated in the catalogue. Any subsequent processing is not permitted.

Preparation for assembly

During assembly and disassembly, the metal bellow must not be deformed more than three times higher than the permissible misalignment values mentioned in the catalogue. Avoid using any force. The shafts and bores of the hubs to be connected must be free from dirt and burrs. Please check the connection dimensions of the shafts (as well as the dimensions regarding the key) and the tolerances. KBK metal bellows couplings have got an H7 fit. This fitting tolerance and the shaft extension facilitate both assembly and disassembly. The recommended fitting tolerance is 0,02mm - 0,05mm.



ATTENTION!


Any oils and fats including molybdenum disulfide or any other high-pressure additives as well as lubricating pastes may not be used.



Assembly

Slide the complete coupling onto the stub shaft. In the correct axial position, tighten the clamping screws (A) to the torque indicated in the table by using a torque wrench. Then insert the second stub shaft (e.g. a rotary encoder) and in the correct axial position, when the metal bellows is free of axial load, tighten the clamping screws as mentioned before.

KB2 /	1	5	10	15	20	45	100
T _A (Nm) (A)	0,1	0,43	0,43	0,85	2	3,5	4,5

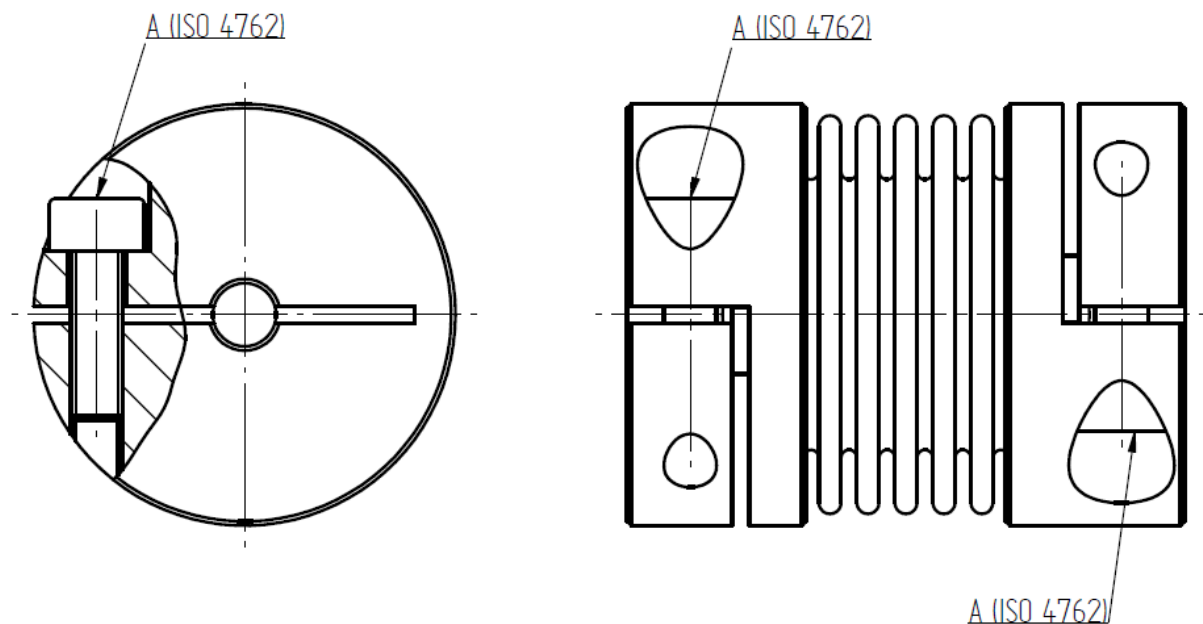


Disassembly

When disassembling the KBK metal bellows coupling, loosen the clamping screws (A).

Maximum Misalignment

KBK metal bellows couplings compensate lateral, axial and angular shaft misalignment.

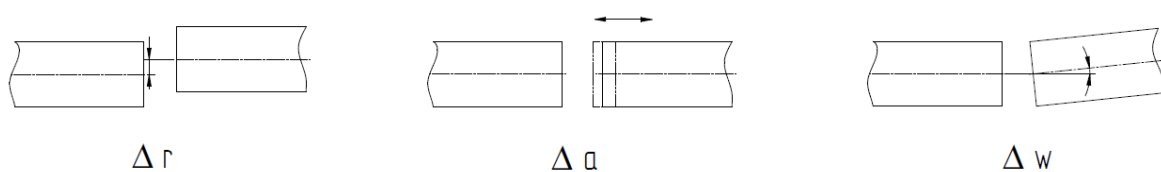

$$\sum \left[\frac{\Delta r}{\Delta r_n} * 100\% + \frac{\Delta a}{\Delta a_n} * 100\% + \frac{\Delta w}{\Delta w_n} * 100\% \right] < 100\%$$



Definition	
Δr	Radial misalignment (installed condition)
Δa	Axial misalignment (installed condition)
Δw	Angular misalignment (installed condition)
Δr_n	Maximum permissible radial misalignment (according to catalogue)
Δa_n	Maximum permissible axial misalignment (according to catalogue)
Δw_n	Maximum permissible angular misalignment (according to catalogue)

	Torque T_{KN} (Nm)	Dimensions (mm)								Technical Ratings							
		L	$\varnothing A$	D1/D2	H	C	$\varnothing B$	E	F	Mass (g)	Moment of Inertia J (g cm ²)	Spring Stiffness			Misalignment		
		Length (± 1)	Outer \varnothing	Bore Sizes (H7) min ~ max			Max. \varnothing	Hub- length	Screw (DIN 912) T _A (Nm)			torsional C _T (Nm/rad)	radial C _R (N/mm)	axial C _A (N/mm)	radial ΔK_r (mm)	axial ΔK_a (mm)	angular ΔK_w (°)
KB2/1	0.1	25	10	1-4	3.4	2	11	7	M1.6 0.1	3	0.5	65	10	14	0.12	0.2	1.2
KB2/5	0.5	21	15.5	3-8	5.2	2.5	17.5	8	M2	7.5	2.7	260	43	13	0.1	0.2	1
		25							7.8	2.8	200	18	10	0.15	0.3	1.5	
		28							8.2	3	160	9	8	0.2	0.4	2	
KB2/10	1	23	15.5	3-8	5.2	2.5	17.5	8	M2	9	3.1	510	74	27	0.1	0.2	1
		26							9.3	3.4	380	31	20	0.15	0.3	1.5	
		31							10	3.7	310	16	16	0.2	0.4	2	
KB2/15	1.5	26	20	3-10	7	3	21	9	M2.5	13	8	750	59	15	0.1	0.3	1.5
		31							15	9.3	700	20	9	0.15	0.4	2	
KB2/20	2	32	25	3-14	9	3.5	27	11	M3	29	24	1500	67	12	0.15	0.3	1.5
		38							32	27	1300	21	11	0.2	0.4	1.5	
		42							2	33	29	1050	11	9	0.25	0.5	2
KB2/45	4.5	41	32.5	6-16	12	5	34	14	M4	61	100	6500	168	32	0.1	0.3	1.5
		50							3.5	67	112	4200	41	20	0.2	0.5	2
KB2/100	10	47	40.5	6-25	15.5	5	41.5	14	M4	86	233	8100	120	27	0.15	0.4	1.5
		57							4.5	106	290	6800	29	17	0.3	0.6	2



Information!

The maximum guideline value for the different misalignments can be found in our catalogue under 'technical information'. They provide security to compensate operation-related external influences e.g. thermal expansions and / or sinking foundation.



ATTENTION!

Lateral misalignment has a negative effect on the service life of the metal bellow. An exact alignment of the coupling increases the service life considerably. The load for neighboring bearings is reduced and this will have a positive effect on the running smoothness of the entire driveline.



Maintenance

KBK metal bellows couplings are maintenance-free. Regular inspection intervals should include a visual check of the KBK metal bellows couplings. If KBK metal bellows couplings are used as intended, they will have a long-lasting durability.

Transportation

KBK metal bellows couplings are delivered ready for installation. Upon incoming goods inspection the metal bellows couplings should be stored in their original packaging and in this way they should be made available for installation. Operating and installation instructions should be always accessible for everybody at the installation location upon installation.